

# Quick Guide Inflatables



Note:

Read the 'safety information' document and this quick guide carefully before using your YellowV product.  
Both documents are supplied.


For the full manual please visit [www.YellowV.com](http://www.YellowV.com)




YellowV

# Valve operation & inflate the inflatable

- Place the inflatable on a flat surface, free from sharp objects.
- Unfold/roll out the inflatable and lay it flat.
- Before inflating the inflatable, check the recommended operating pressure indicated on the inflation valve ring.

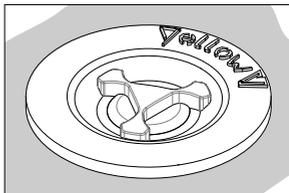


- Loosen the cap on the inflation valve.

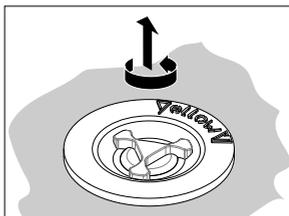

- Check that the central push-push mechanism on the inflation valve is closed (high position). If it isn't, press it and turn it a quarter turn. The push-push mechanism is now in the highest position.

- Connect the included hose adapter (1)/pump adapter (2) to the inflation valve and connect a suitable pump to it.

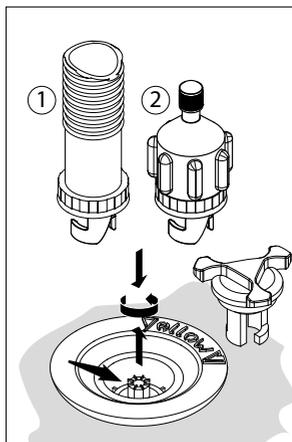

- Inflate the inflatable to the recommended working pressure.
- Remove the hose adapter/pump adapter.
- Replace the cap on the inflation valve.

## WARNING


- Do not use compressed air (such as a compressor for car tyres).

## CAUTION

- Do not expose the inflatable to direct sunlight when it is not in the water, as expanding air can cause damage or bursting.
- If the pressure is too high, it could lead to structural (irreparable) damage.


## Fin (SUPS and kayak only)

- Fully inflate the SUP or kayak.
- Turn the SUP or kayak over with the fin box for the fin facing upwards.
- Push the fin all the way into the fin box (1).
- Push the pin through the side of the fin box and the fin. You will hear a click (2).
- Removal is in reverse order.

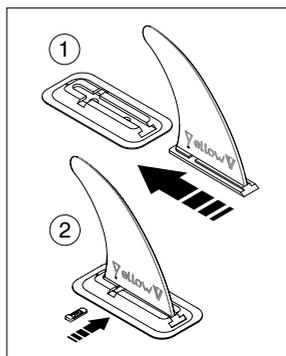

## Storing

- The inflatable must be cleaned properly after use. To do this, use a solution of mild soap and clean water. Make sure that all sand, pebbles, oil and dirt are removed.
- Put the inflatable in the shade and allow it to dry.
- Remove the cap from the inflation valve.
- Press the push-push mechanism on the inflation valve and turn it a quarter turn to open the inflation valve (low position).

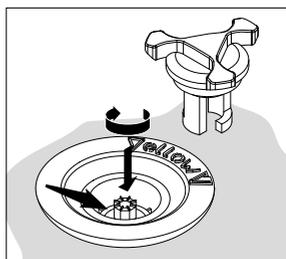

- Fold/roll the inflatable towards the inflation valve to remove all air.
- Do not fold/roll the board too tightly.
- Replace the cap on the inflation valve.
- Store the inflatable in a cool, dry and ventilated place.

### NOTE

- Never allow the inflatable to dry in direct sunlight.
- Due to the strong airflow and relatively loud noise during deflation, some distance from the inflation valve is recommended.

### CAUTION

- Tight folding/rolling can damage the air seams, EVA foam and kickpads (if any).



# Yellow V



YellowV.com



/YellowV.inflatables/



/YellowV\_inflatables/

